


SHAD

PEUGEOT CITYSTAR 125-200 '12-16 KIT TOP POCT16ST

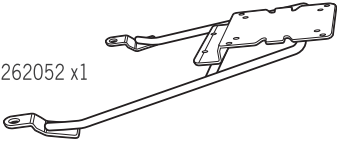

1 262052 x1



2 260538 x2
Ø16 Ø9 x 9



3 303017 x2
Ø6



4 304038 x2
M6 x 22 Din 912



5 304032 x2
M8 x 50 Din 7991



6 400253
x 0,2 m



! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

