


SHAD

SUZUKI V-STROM 650 '12

SOVS62IF

3P
SYSTEM

DESIGNED IN
BARCELONA

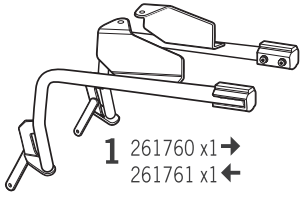

1 261760 x1 →
261761 x1 ←



2 303020 x6
Ø8



3 304028 x2
M8 x 25 Din 7380



4 304024 x2
M8



5 304272 x4
M8 x 35 Din 7380

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

