


# SHAD

## KEEWAY RKF 125 '18 KIT TOP KORK18ST



1 262414 x1




2 304201 x4  
M6 x 40  
DIN 7380



3 303017 x4  
Ø6



4 260538 x4  
Ø16 Ø9 x 9

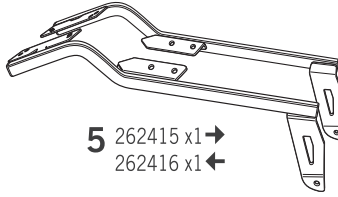

5 262415 x1 →  
262416 x1 ←



6 304028 x6  
M8 x 25  
Din 7380



7 303045 x12  
Ø8



8 302024 x6  
M8

### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

